




Connect the hinge to the adapter plate bonded to the mirror.

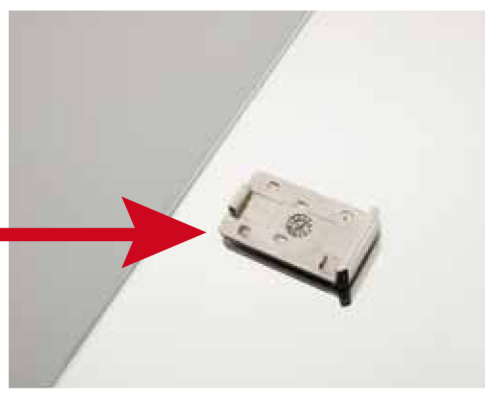

Connect properly.

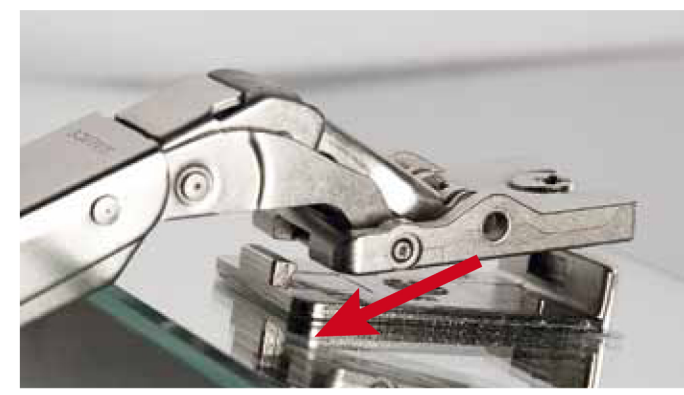


Turn the excenter to lock.

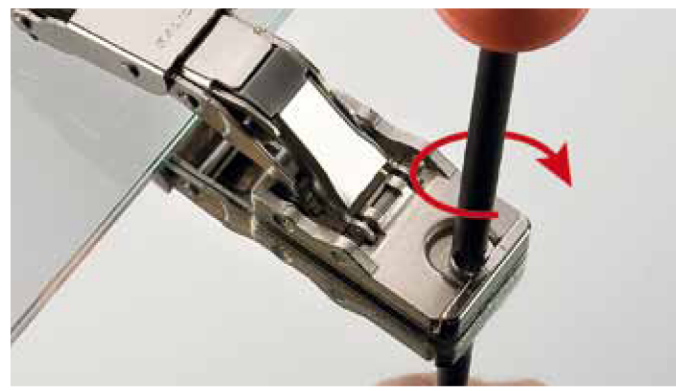


Slide the hinge arm on the plate.



Use this screw to fix the hinge and to adjust the door frontally.

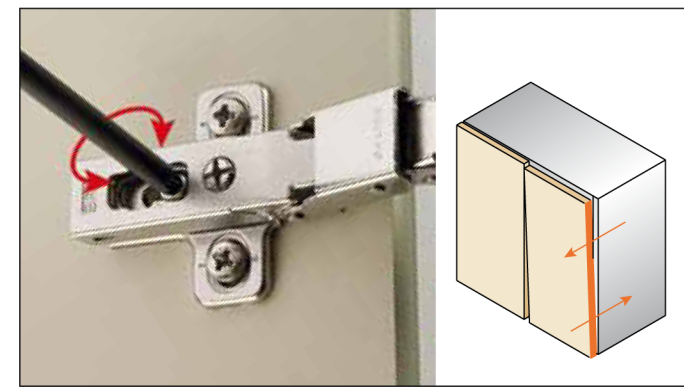

Use this screw to adjust the door sideways.

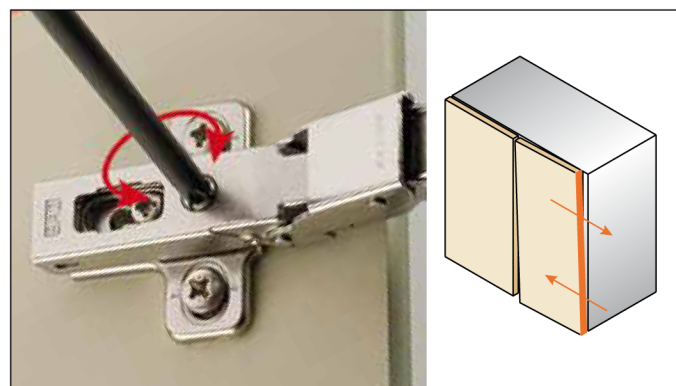

Use these screws to adjust the door vertically.

